


ROAD RUNNER



Telit to your friends...

Quick Search – for quickly opening the phone book and displaying names alphabetically: press  in standby mode

For quickly looking up a name in the phone book, enter the first letter of the name (to narrow down the list of names, enter the next letter of the name and so on).

Quick Dial – press the memory cell number (2 to 99) where the desired number has been stored and then .

Sounds






Audio Volume – to change the volume during a call, press the volume side buttons. In standby mode:

menu    
and then press  to confirm

Ring Volume – during the standby display, press the volume side buttons.

Silencing the Microphone – press  during a call

Call Logs

For all calls – press  and browse to the desired number 
Then press  Press  for outgoing calls, or  for incoming calls, and select.

Introducing-

ROAD RUNNER

SharonShern.

Right Soft key / OK

Send key for making and accepting calls

Keyboard

On/Off button



Display, 65k colors


OK key


Right Soft key


Menu shortcuts

End key for ending call


Operation

Switching on and off – press and hold  until the display turns on / turns off. Switch on/off the ignition power up / off the device.

Accepting a call – press 

In standby mode – press the key  for a list of all calls.


To end a call – press 

Dialing – enter the telephone number including area code and then press 


Shortcut Keys

For quick phone book access press 

For main menu press 

In menu mode – press the key  (up / down / right / left) to browse between the menu options.




In menu mode press  to select an option


To select press 

Saving a Number



Enter the telephone number and press



 save  browse  with and enter the information: name, number etc.

Press  for confirmation.

Settings:

Press menu   to define Sounds, Display and Security